



Quick Start Guide - Under-Desk Basket Cable Tray

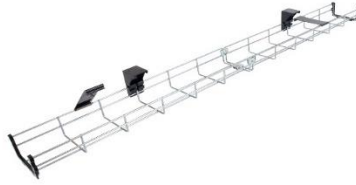


1. **Warning: Safety Gloves must be worn when mounting this product.**
2. **There may be extra connectors in the package.**

Step 1. Depending on the length, your product is made out of several trays (at least 2 pcs) linked together. You will need to connect the composing trays using the 3 connectors provided in the package, shown in the image below.

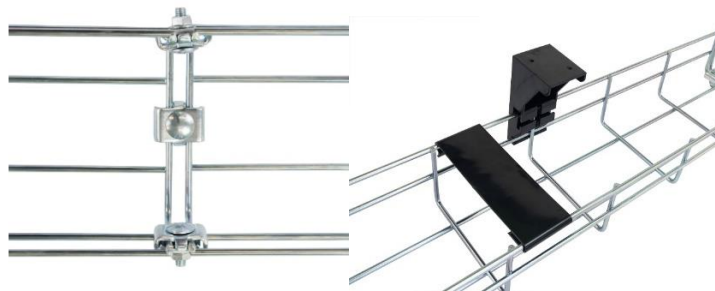

Step 2. Add the plastic mounting brackets to the tray. They must be mounted always on one of the joints (where the horizontal and vertical wires meet). First slide it down then along the back, pull up and finally push until it clicks, shown in the image above.

Step 3. Add the end plastic caps. Please push firmly till they click in position.

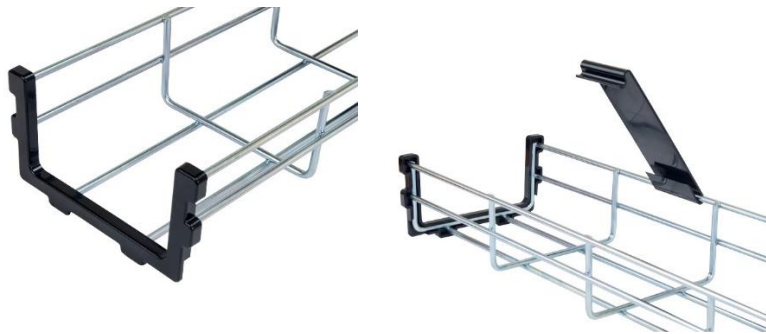

Step 4. Mount the cables plastic cover but leave it open until all the cables are in their final position.

Step 5. Using the screws provided mount the cable trays under your desk. The rear screw has to go at a slight angle into the underside of the desk as it is partly obstructed.

Our range of under desk cable trays:

MODEL	Description	MODEL	Description
CT80+2MT	80cm long	CT140+3MT	140cm long
CT100+2MT	100cm long	CT160+3MT	160cm long
CT120+2MT	120cm long	CT180+3MT	180cm long