

Note: Press "M" and "T" simultaneously for 5s, the buzzer beeps once and the "S-1" is displayed. You have enter the setting menu successfully. The setting process will exit automatically if no action for 10s. You can cancel the unsaved settings by pressing "T".

• Minimum & Maximum Height Settings

To set a minimum height limit

1. Press "M" and "T" simultaneously for 5s, the buzzer beeps once and the "S-1" is displayed.
 2. Press "M" once, then press "UP"/"DOWN" to set your desired min. height.
 3. Press "M" to save. "L-S" will be displayed if successfully save while "L-F" shows fail
- Note:** Default min. height is 62cm(24.4"), and the adjustable range is 62-118cm(24.4"-46.4").

To set a maximum height limit

1. Press "M" and "T" simultaneously for 5s, the buzzer beeps once and the "S-1" is displayed.
 2. Press "UP"/"DOWN" and switch to "S-2"
 3. Press "M" once, then press "UP"/"DOWN" to set your desired max. height.
 4. Press "M" to save. "H-S" will be displayed if successfully save while "H-F" shows fail.
- Note:** Default max. height is 128cm(50.4"), and the adjustable range is 72-128cm(28.3"-50.4").

• Adjust the Anti-Collision Sensitivity (Current Sensor)

To set a upwards current sensitivity

1. Press "M" and "T" simultaneously for 5s, the buzzer beeps once and the "S-1" is displayed.
 2. Press "UP"/"DOWN" and switch to "S-3"
 3. Press "M" once, then press "UP"/"DOWN" to change the sensitivity level.
 4. Press "M" to save. "S-S" will be displayed if successfully save while "S-F" shows fail.
- Note:** Default sensitivity is 4, and the adjustable range is 0-8. (0: off/8: maximum)

To set a downwards current sensitivity

1. Press "M" and "T" simultaneously for 5s, the buzzer beeps once and the "S-1" is displayed.
 2. Press "UP"/"DOWN" and switch to "S-4"
 3. Press "M" once, then press "UP"/"DOWN" to change the sensitivity level.
 4. Press "M" to save. "S-S" will be displayed if successfully save while "S-F" shows fail.
- Note:** Default sensitivity is 4, and the adjustable range is 0-8. (0: off/8: maximum)

• Adjust the Anti-collision Sensitivity(Gyro Sensor)

1. Press "M" and "T" simultaneously for 5s, the buzzer beeps once and the "S-1" is displayed.
 2. Press "UP"/"DOWN" and switch to "S-5"
 3. Press "M" once, then press "UP"/"DOWN" to change the sensitivity level.
 4. Press "M" to save. "S-S" will be displayed if successfully save while "S-F" shows fail.
- Note:** Default sensitivity is 4, and the adjustable range is 0-8. (0: off/8: maximum)

• Displays Height Currently (with Desktop Thickness)

1. Press "M" and "T" simultaneously for 5s, the buzzer beeps once and the "S-1" is displayed.
2. Press "UP"/"DOWN" and switch to "S-6"
3. Press "M" once, then press "UP"/"DOWN" to set your desired desktop thickness.
4. Press "M" to save. "T-S" will be displayed if successfully save while "T-F" shows fail.

• Screen Lock Setting

1. Press "M" and "T" simultaneously for 5s, the buzzer beeps once and the "S-1" is displayed.
2. Press "UP"/"DOWN" and switch to "S-7"
3. Press "M" once, then press "UP"/"DOWN" to change the screen lock setting. (0: off/1: on)
4. Press "M" to save. "A-S" will be displayed if successfully save while "A-F" shows fail.

• To Save the Customized Settings at one time

(eg: save the max. and min. limit height at one time)


After adjusting the min. height limit, press "T" to get back and enter "S-2" to adjust the max. height limit. Once finish, press "M" to save both settings.

• To Reset the Customized Settings


Press "M", "T" and "UP" simultaneously for 5s until buzzer beeps.

Digital Control Panel For Electric Height Adjustable Desk

Installation Instruction & User Guide

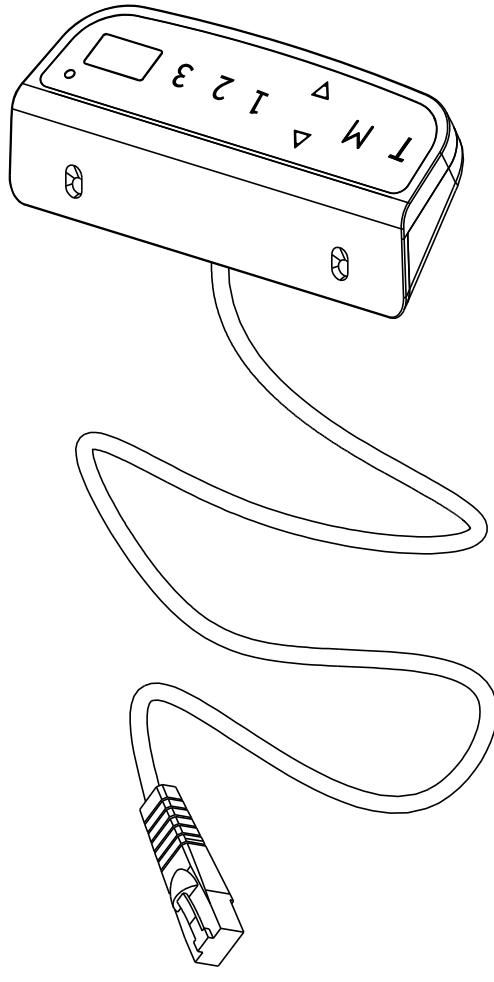

Model: EDF12D / EDF14D

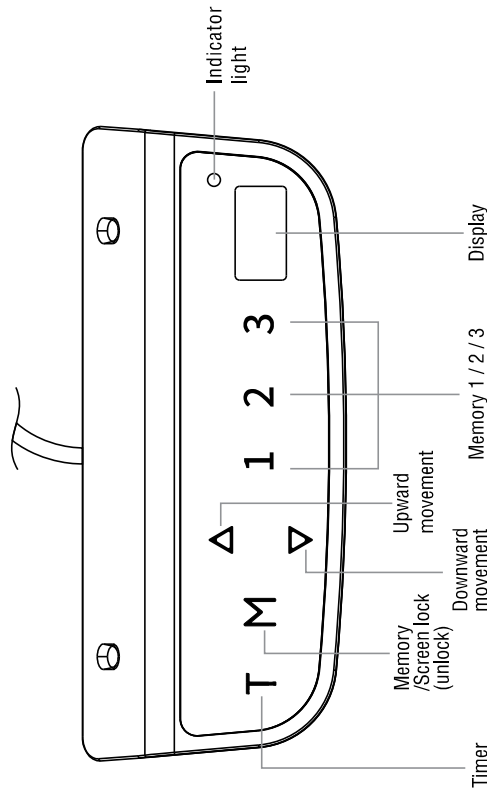

Operation Instruction:

Height Adjustment: Press and hold the up/down button to lift/lower the desk. Press and release the button to lift/lower the desk precisely.

Timer: The timer is designed to inform users to stand up after a set period of time. Press the "T" button to set the period of time. The display will flash "0.5 h" for 0.5 hour. Each press of the "T" button leads to a 0.5 hour increment. The maximal setting of time is 2 hours. When the display stops flashing, then the period of time is successfully set. And the indicator light on the top right of panel will be on. When the set time is up, the buzzer will beep to remind the users. The timer will turn off automatically after five beeps. To cancel the timing, press "T" button for 5 times until the display shows the current height and the indicator light is off.

Memory Setting: Adjust the desk to your desired position, Press the "M" button, then "S" appears on the display. Meanwhile press "1", "2" or "3", the memory is successfully set. Press "1", "2" or "3" to get to the programmed memory position. Press any button to stop the motion.

Screen Lock/Unlock: Note: To auto-lock/lock/unlock, please ensures the lockable display function is ON first. For this CT-08 touch digital control, screen lock function is ON by default. Refer to "PART 3 – Custom Programming Guide" and change the screen lock setting.

- Auto-lock: When no actions are made for over 1 minutes, the screen will lock automatically and the display shows "---".
- To lock: press "M" for 3s and the display shows "---". The screen has been locked and any operation is invalid.
- To Unlock: press "M" for 3s and the display shows the current height.

Changing between CM and INCH: Press "T" for 8s. From "cm" to "inch", beeps twice. From "inch" to "cm" beeps once.


Reset Mode: Press "UP" and "DOWN" simultaneously until the buzzer beeps. (The desk will move down to the lowest position then raise a little. Please make sure you never release the button during the process.)

In Front

This repair guide intends to help you identify and solve the minor problems caused by unusual operation of the electric system of our sit-stand desk. **If the following guides can't help solve the problems, please contact your point of purchase for service and replace the accessories.**


E01/E07 Troubleshooting

The system has experienced unusual electrical problems. Disconnect the power first, then wait for 30s (until the display stays off) and reconnect.

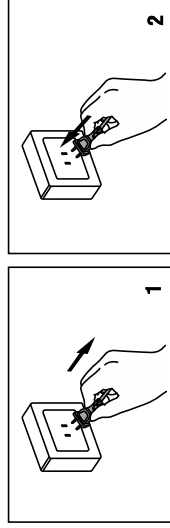

HOT Troubleshooting

System overheating. Allow your desk to cool down and remain idle for approximately 18 minutes.

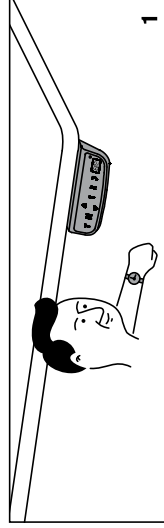

Error No.	Description	Solution	Error No.	Description	Solution
rSt	Reset system	Press & hold both "UP" & "Down" buttons till it beeps	E16/E26	Motor failure	Reset the system
E02	Column of height difference	Reset the system	E17	Desk run in wrong direction	Replace the motor cord (M1)
E04	Digital controller connection error	Check the connection then reconnect the power	E18/E28	Weight overload	Remove the items on the desktop
E05	Collision avoidance system	Release the button	E21	No connection	Check the connection (M2)
E06	Electrical Problem	Replace the control box	E23	Motor wire broken	Check then replace the motor cord (M2)
E08	Uneven desktop	Reset the system	E24	Hall wire broken	Check then replace the motor cord (M2)
E11	No connection	Check the connection (M1)	E25	Short circuit	Replace the motor (M2)
E12/E22	Abnormal current	Replace the control box	E27	Desk run in wrong direction	Replace the motor cord (M2)
E13	Motor wire broken	Check then replace the motor cord (M1)	E42	Memory function failure	Replace the control box
E14	Hall wire broken	Check then replace the motor cord (M1)	E43	Sensor failure of collision avoidance system	Replace the control box
E15	Short circuit	Replace the motor (M1)			